



X4 FOOTREST INSTALLATION INSTRUCTIONS

Remove footrest assembly and Installation kit from packaging.

Installation kit should consist of the following:

- 4- 1/4-20 x 5/8 Flat head screws
- 4- 5/16-18 x 7/8 Flat head screws
- 4- 5/16-18 Shoulder nuts
- 2- Gas lift springs

Tools required are:

- 5/32" Allen wrench
- 3/16" Allen wrench
- 1/4" Allen wrench



Place footrest assembly face down on a clean surface.

Press gas springs onto ball studs as shown in fig. 1.

Failure to install gas springs with the rod down could result in premature failure.

Position footrest assembly so that rear mounting holes line up, and loosely install 2 rear screws.

Move footrest up so that front holes line up and install 4 front screws and shoulder nuts as shown in fig 2.

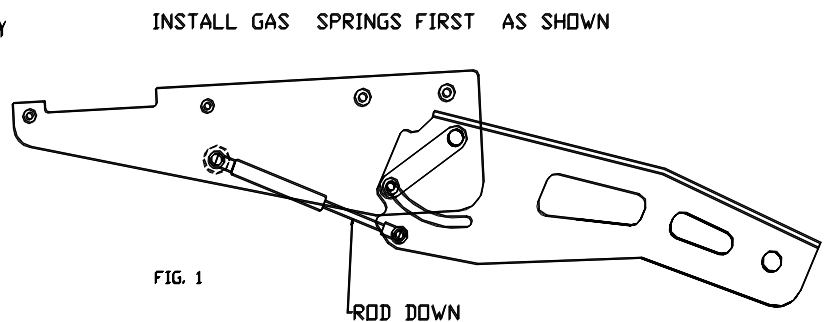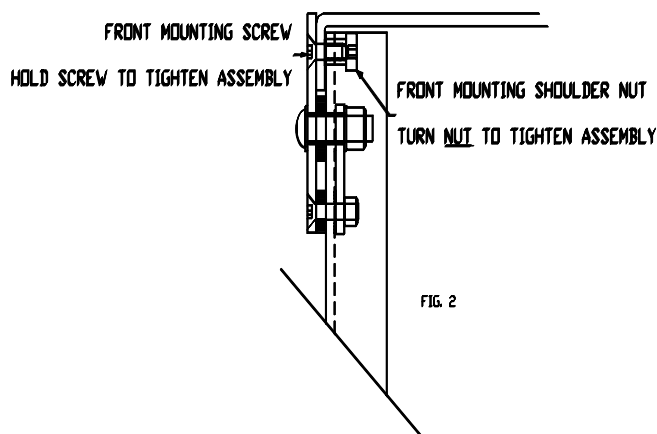

Install remaining screws at rear.

Tighten all screws evenly, using Allen wrench to turn front screws until snug.

To do final tightening on front screws, hold screw on the outside, and **use the shoulder nut to tighten the assembly.**